


Read through entire instructions before assembly.
After installation store instructions for future reference.




Use appropriate screws, depending on wall type.
Use mounting screws for wood surfaces. Use mounting screws and concrete anchors for concrete surfaces.

Assemble the frame.

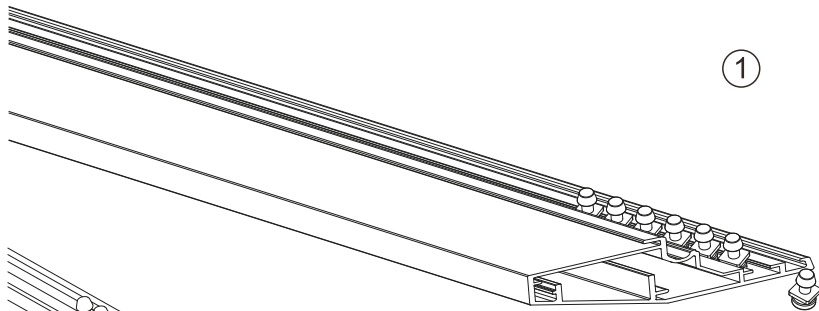


①




1. Slide the plastic snap lugs into each frame rail according to the required quantity showing on the sticker of each frame.

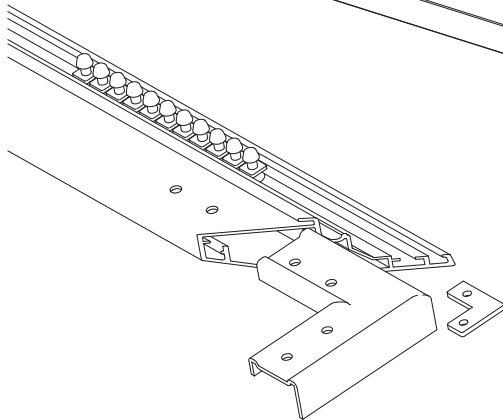

2. Slide the metal corners into the end of the long frames.

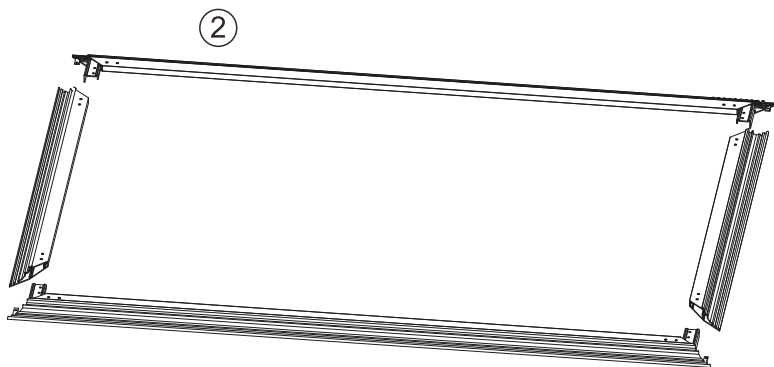


②

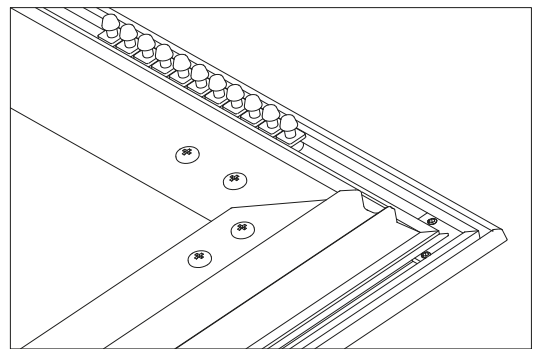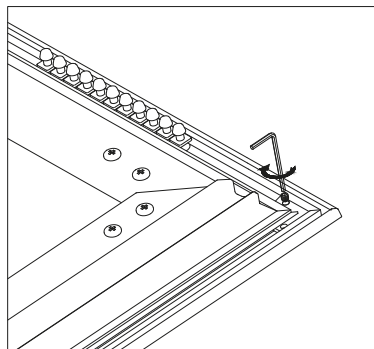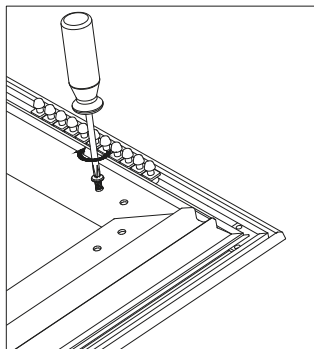


③

3. Put all the frames together and screw in 4 corner screws into each corner of the frame.

Install the support bars and screen material.

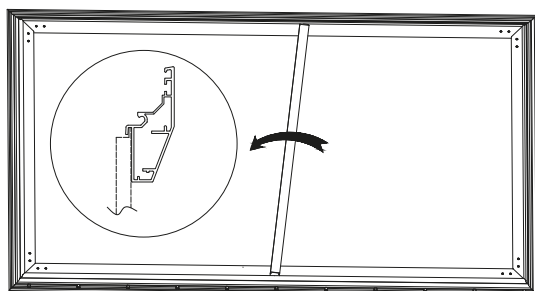


④

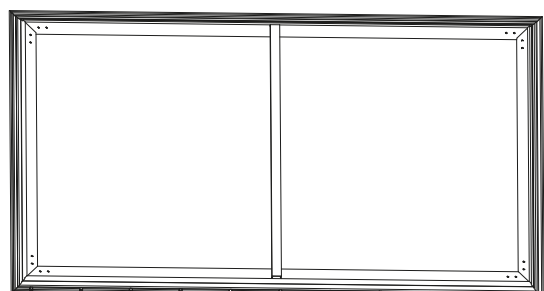


4. Install the support bar in the proper place. (Quantity of the support bars is up to the screen size)

⑤

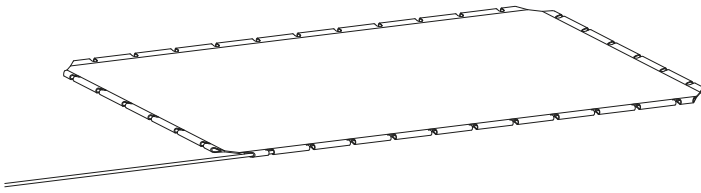



5. Make sure the floor is clean, keep the viewing side facing down and unroll the screen material. Use the appropriate rods for each side, insert the rods into the pockets on the edges of the screen.

⑥

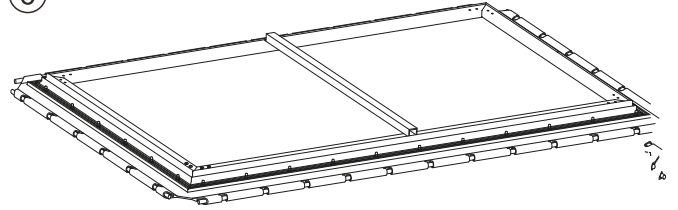



6. Place the assembled frame onto the screen material and ensure the frame is placed on the middle of the screen material.

⑦

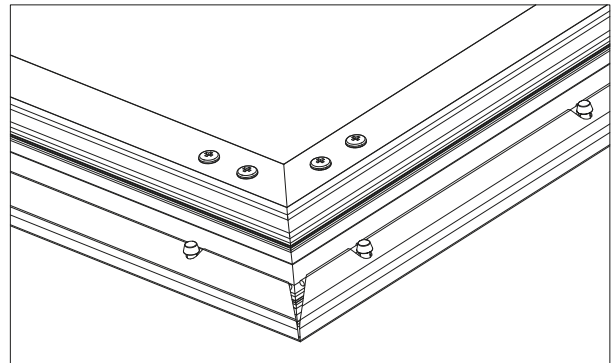
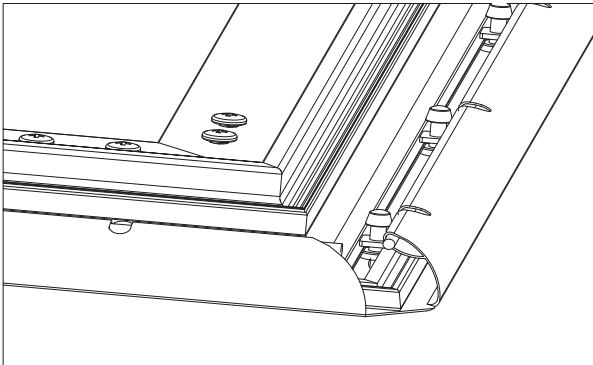


7. Fold over the screen material and secure each notch of it lining up with one snap lunge on the frame. First work toward each corner and then toward others.

⑧

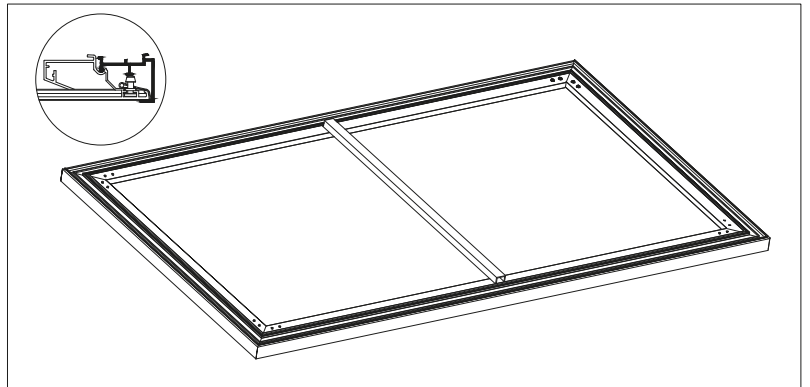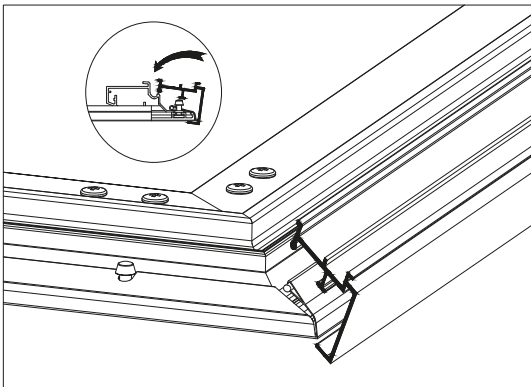


8. Install all 4 thin panels into each frames, make sure the bevels of the thin panels and frames are coincided and the flatness of the screen material during all procedures.

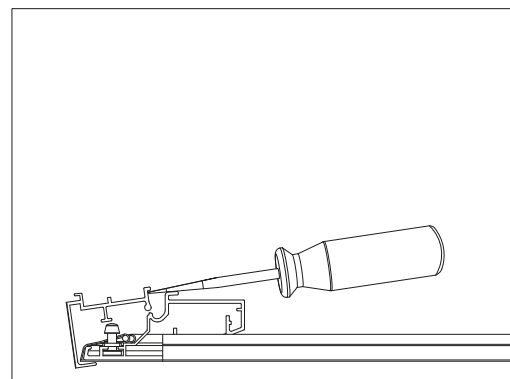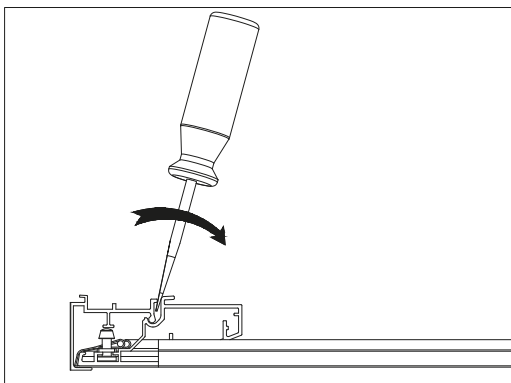

NOTE: If the thin panel is not installed correctly, please follow above procedures for disassembly.


Hang screen on the wall.

⑨

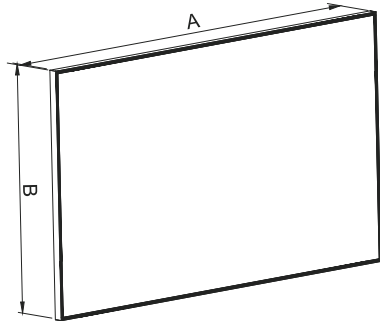


9. Measure the frame the distance for A and B showing as above.

⑩

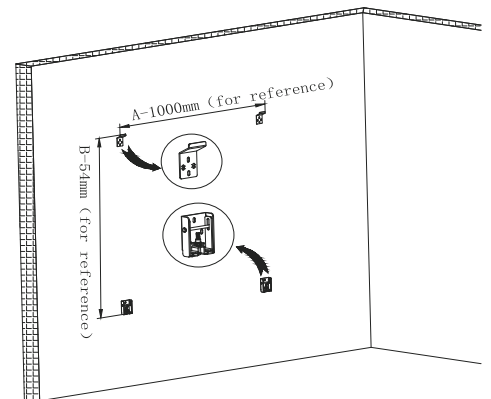


10. Install the upper and lower mounting brackets according to above measurement.

⑪

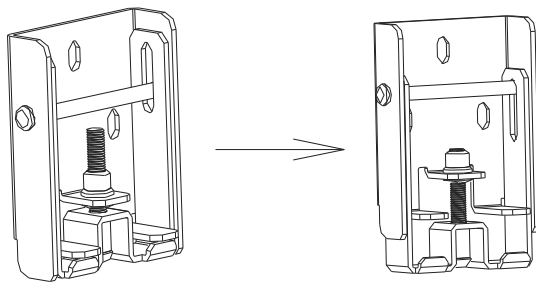


11. Loosen the screw of each lower mounting bracket.

⑫

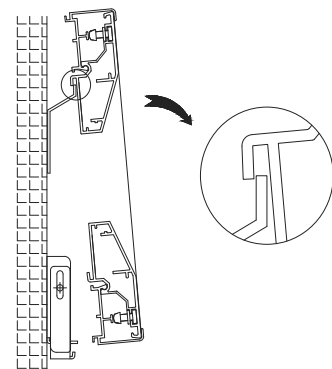

12. Lift the screen onto the upper mounting brackets.

⑬

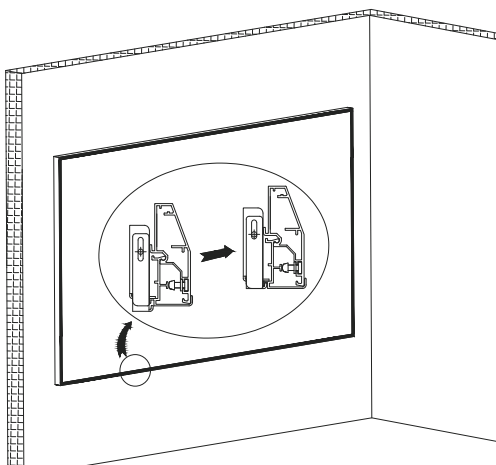

13. Lock the screen into the lower mounting brackets and fasten the screws. Installation completed.